 



SHOWER CLOCK RADIO

MODEL : MR383

MANUAL

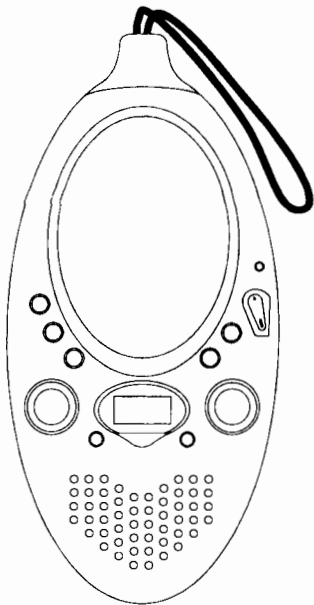

 LOCATION OF CONTROLS


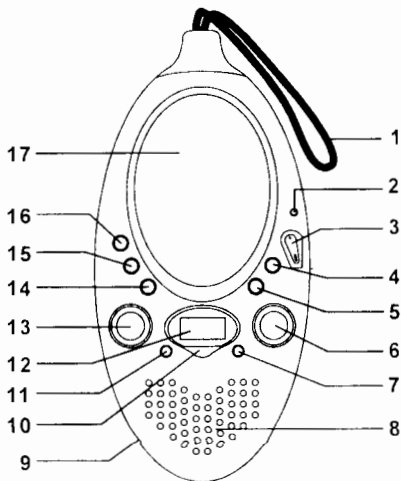


- | | |
|---|---------------------------------------|
| 1. Nylon hanger | 10. Light button |
| 2. Power LED indicator | 11. Hour button |
| 3. Selector switch (Select
AM/FM/Buzzer alarm) | 12. Display |
| 4. Power ON button | 13. Volume knob |
| 5. Power OFF button | 14. Alarm On/Off button |
| 6. Tuning knob | 15. Alarm button
(Alarm setting) |
| 7. Minute button | 16. Time button
(Time setting) |
| 8. Speaker | 17. Mirror |
| 9. Battery door | |


INSTALLATION

SPLASH RESISTANT: DO NOT use product direct water flow. This unit is splash resistant and will only meaning it can withstand small splashes of water.


- WALL MOUNT BRACKET AND NYLON ROPE HANGER

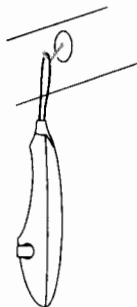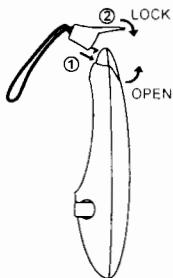

- VERTICAL TABLE STAND.


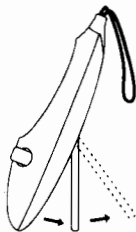


To maintain the best reflection of your fog free mirror, only wipe with a clean, dry cloth. DO NOT use cleaning products

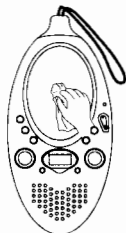

POWER SOURCES

- 1 Push open the battery door and back up battery door .
- 2 Insert x2 SR-936 batteries (for back up clock) and 4 "AA" Size (UM-3) alkaline batteries by matching the (+ and -) to the diagram inside the battery door.
(Batteries is not included)
- 3 Close the battery door.

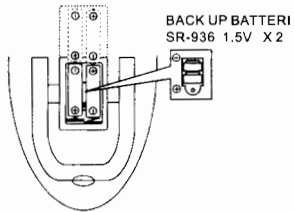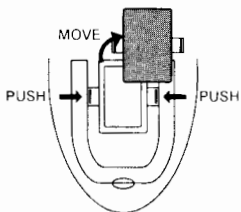

CLOCK SETTING

TIME SETTING

- 1 Press and hold Time button to set the clock.
- 2 Press Hour or Min button respectively

SETTING THE ALARM

- 1 Press and hold Alarm button to set the Alarm time
- 2 Press Hour or Min button respectively
- 3 Press AL/ON/OFF button to on the unit the icon "🔔" appear in the display
- 4 Slide selector switch to select AL. To wake to Alarm(Buzzer) slide SELECTOR switch to FM or AM for wake to radio

To stop alarm sound

To stop alarm sound press the AL/ON/OFF button one time To cancel alarm function press again AL/ON/OFF button. the display alarm icon turn off

OPERATION

LISTENING TO THE RADIO

- 1 Slide Selector switch to set the AM or FM position.
- 2 Press Power On button to on the unit. Power LED indicator will on
- 3 Turn Tuning knob tune in desired Radio station.
- 4 To turn off Radio. Press Power Off button to off the unit.

ANTENNAS

AM/FM antennas are built into the unit

LIGHT

To light up the display, press the LIGHT button

TROUBLESHOOTING GUIDE

SYMPTOM	CAUSE	SOLUTION
No sound	Power is not on.	Press the power On button. Check batteries.
	VOLUME Control is set to minimum.	Adjust the VOLUME Control.
	Wrong function is selected.	Slide the SELECTOR Switch to the proper position.
	Station not tuned properly for AM or FM	Retune AM or FM broadcast station.
	Unit is not positioned correctly.	Rotate unit until best Reception is obtained.