 
 


SHOWER CD CLOCK RADIO MODEL: CD-163

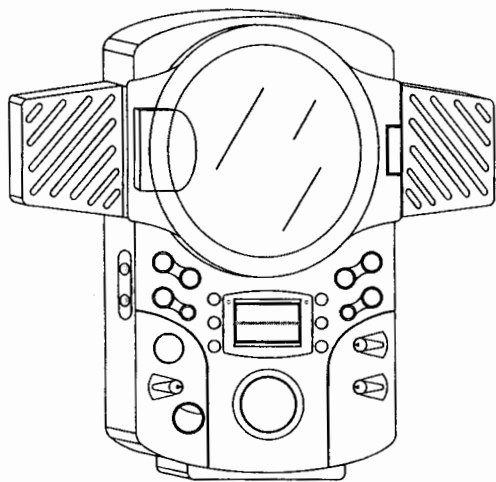

BEFORE OPERATION THIS PRODUCT, PLEASE READ
INSTRUCTIONS COMPLETELY

SAFETY PRECAUTIONS



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE

Uninsulated Dangerous Voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product's enclosure.



ATTENTION

The Owner's Manual contains important operating and maintenance instructions. For your safety, it is necessary to refer to the manual.



DANGER:

Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

FCC WARNING:


This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

LASER SAFETY: This unit employs a laser. Only qualified service personnel should attempt to service this device due possible eye injury.

CAUTION: USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

SPLASH RESISTANT: DO NOT use this unit under direct water flow. This unit is splash resistant and will only withstand small splashes of water.

LOCATION OF CONTROLS

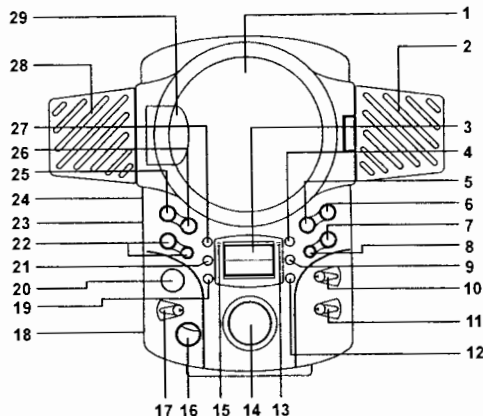


1. CD compartment & Mirror
2. Speaker
3. CD/Radio/Clock display
4. Alarm button (Alarm setting)
5. Power ON button
6. Power OFF button
7. AL ON/OFF button
8. Time button (Time setting)
9. Hour button (Clock Hour setting)
10. Selector switch
(Select AM/FM/Buzzer alarm)
11. Selector switch
(Select AUTO/AL, RADIO/CD)
12. Minute button (Clock Min setting)
13. FM Stereo LED indicator
14. Radio tuning knob
15. Power LED indicator
16. Light button
17. Back light selector switch
18. Battery door
19. Random button
20. Volume knob
21. Program button
22. Skip/Search button
23. Headphone jack
24. DC Input jack 9V
25. Play/Pause button
26. Stop button
27. Repeat button
28. Speaker
29. CD door open cover

INSTALLATION


SPLASH RESISTANT: DO NOT use this unit under direct water flow. This unit is splash resistant and will only withstand small splashes of water.

- WALL MOUNT BRACKET AND NYLON ROPE HANGER

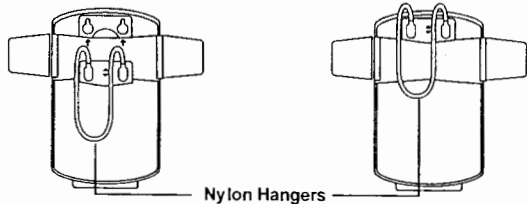


Nylon Hangers

- SPEAKERS FOLD BACK BEHIND CABINET

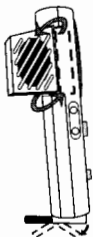

- VERTICAL TABLE STAND

To maintain the best reflection of your fog free mirror, only wipe with a clean, dry cloth.
DO NOT use cleaning products

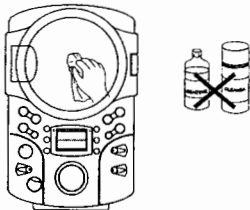


BATTERY SOURCES

This CD player requires either 6 "C" cell batteries (not included) or a 9V DC 600mA adapter having a positive center.

BATTERY INSTALLATION

1. Make sure the unit is not on the base. Open the battery compartment door by rotating the tab, then lift the battery compartment off.
2. Insert six (6) "C" cell batteries (not included) as shown in the illustration to the right. Alkaline batteries are recommended for the longest playing time.
3. Replace the battery compartment cover and rotate the tab so the compartment is secured.

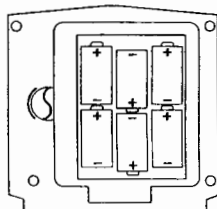

USE UM-2 SIZE BATTERY 1.5V X 6

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated next to the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)

AC OPERATION

To operate the unit using AC power, connect a 9V AC adapter (not included) to an AC outlet having 110V/220V AC only. Plug the small end into the DC 9V jack on the unit and connect the other end into the AC outlet. The batteries are automatically disconnected when the AC adapter is used.

CAUTION: When not using AC power, disconnect the AC adapter from the wall outlet by pulling the plug (not the cord). Do not touch the AC adapter with wet hands and plug fully inserted without exposing any part of the blade.
DO NOT use unit on AC operation if item is being used in the tub/shower.

OPERATION

HEADPHONE JACK

This unit will accept stereo headphones with a 3.5 mm Ø plug. Before connecting the headphones set the volume to minimum level as not to damage your ears or the headphones. Connect the headphones to the headphone jack (23), the speakers will be automatically disconnected.

Warning: Prolonged exposure to high sound levels may permanently damage your hearing. You may not hear some warning sound while wearing these headphones. DO NOT use headphones if listening to unit near water.

VOLUME

Adjust the VOLUME control (20) to the desired level.



BACK LIGHT

To light up the display, press the LIGHT button (16). Select back light colour, slide the back light selector switch to R(RED), G(GREEN) or RANDOM (3 automatic colour changes).

To cancel back light, slide the back light selector switch to off position.

LISTENING TO THE RADIO

1. Slide SELECTOR Switch (11) to select the Radio.
2. Press POWER button (5) to on the unit.
3. Slide SELECTOR Switch (10) to select AM or FM.
4. Turn TUNING Knob (14) Tune in desired Radio station.
5. To turn off Radio, Press Power button (6) to off the unit.

ANTENNAS

An AM/FM antennas is built into the unit.

OPERATION

CLOCK SETTING


Press and hold Time button (8) to set the clock.
Press Hour (9) or Min (12) button respectively.



SETTING THE ALARM

Press and hold Alarm button (4) to set the Alarm time.
Press Hour (9) or Min (12) button respectively.
Press Alarm button (4),once more to memorize the Alarm Time.

Press AL/ON/OFF button and the icon "☞" will appear in the display.
To wake to Radio or Buzzer switch the selector switch (10) to the required wake mode. For Buzzer slide selector switch to AUTO/AL, for Radio slide selector switch to RADIO.

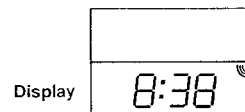


To stop alarm sound (Radio or Buzzer):

- To stop buzzer alarm, press the AL/ON/OFF (7) button one time.
- To stop radio alarm, press AL/ON/OFF (7) button two times. The alarm display icon will turn off, then depress POWER Off button.

OPERATION OF CD PLAYER

PLAYING A CD

1. Unfasten the buckle (29), to open the CD compartment.
2. Insert a CD with the label facing upward.
3. Close the CD compartment.
4. Press POWER button (5) to ON the unit.
5. Press Band switch (11) to select CD.
6. Press PLAY/PAUSE button ►|| (25) to start CD playback from the first track.
7. Press once more PLAY/PAUSE button ►|| (25), to momentarily pause playing track will flash. Press again PLAY/PAUSE button ►|| (25) to resume to playback.
8. To stop the playback, press STOP button ■ (26).

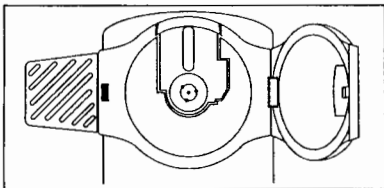

SKIPPING TRACKS

Press during play.

Backward "◀◀" (22)

Forward "▶▶" (22)

Press "◀◀" twice to skip to the beginning of the previous track.

SEARCHING THROUGH TRACKS

Press and hold during play.

Backward "◀◀" (22)

Forward "▶▶" (22)

RANDOM PLAY

During play, press RDM button the "RDM" indicator will appear in Display.

The track play in random order.

To cancel random play, press RDM button one time.


Note: During random play, you cannot return to the previous tracks by pressing SKIP button.

OPERATION OF CD PLAYER

PROGRAMMED PLAYBACK

Up to 20 tracks can be programmed to play in any desired sequence.

1. Press POWER button (5) to turn on the unit.
2. Press Band switch (11) to select CD.
3. Unfasten the buckle (29), to open the CD compartment.
4. Insert a CD with the label side facing upward.
5. Close the CD compartment.
6. Press PROG button (21) until " PRG " flashes in display.

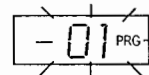

7. Press SKIP Forward ►► or SKIP Backward ◀◀ button to select a desired track to be memorized.
8. Press PROG button (21) to program the track.
9. Repeat steps 7 and 8 to program tracks.
10. Press PLAY/PAUSE button (25) to start playing.

To cancel program play, press ■ STOP button (26) two times.

REPEAT PLAY

To Repeat a Single Track

Press REPEAT button (27) while the track you want to repeat is playing. The " RPT " flashing will appear in Display.

- To repeat another track, press ►► or ◀◀ SKIP button.
- To cancel repeat play, press REPEAT button two times.

To Repeat all the Tracks

Press REPEAT button (27) twice during play. The " RPT " indicator will appear in Display.

- All tracks will be played through in sequence and then the sequence will be repeated continuously.
- To cancel repeat play, press REPEAT button one time.

TROUBLESHOOTING GUIDE


If you experience a problem with this unit, check the chart below before calling for service.

SYMPTOM	CAUSE	SOLUTION
CD Player will not turn on	<ul style="list-style-type: none">- Dead or weak batteries- Wrong adapter being used- AC adaptor not connected properly	<ul style="list-style-type: none">- Replace batteries- Use only center positive 9V adapter- Check AC adaptor connection
Disc will not play	<ul style="list-style-type: none">- Disc inserted incorrectly- Defective compact disc- CD compartment not closed- Moisture condensation on disc	<ul style="list-style-type: none">- Reinsert disc with label side facing up- Try another compact disc- Close CD compartment- Wipe disc with soft cloth
Erratic CD playback	<ul style="list-style-type: none">- Dirty or defective disc	<ul style="list-style-type: none">- Clean or replace disc
No sound	<ul style="list-style-type: none">- Headphone plug not inserted properly- Volume control set to minimum- Weak batteries- Defective compact disc- FUNCTION is not set to the desired position	<ul style="list-style-type: none">- Reinsert headphone cord into Headphone jack- Increase the volume- Replace with fresh batteries, or use AC power- Try another compact disc- Press FUNCTION switch to the desired function
Noise or Sound distorted on radio	<ul style="list-style-type: none">- Station not tuned properly for AM or FM- Unit is not positioned correctly	<ul style="list-style-type: none">- Retune AM or FM broadcast station- Rotate unit until best reception is obtained

CARE AND MAINTENANCE

CARING FOR COMPACT DISCS

- To keep the CD clean, handle it by its edge. Do not touch the surface.
- Do not stick paper or tape onto the CD.

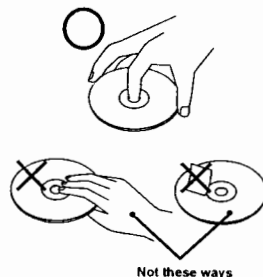

- Do not expose the CD to direct sunlight or heat sources such as hot air ducts. Do not leave the CD in a car parked under direct sunlight.

Cleaning the unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.