


Attaching X10 Control for the SOMFY DR1000 Drapery Motor.

Connection of the Universal Module to the DR1000 Drapery Motor can be accomplished in the following steps:

1. Be sure the CONTINUOUS / MOMENTARY switch is in the "MOMENTARY" position.
2. The adjacent switch should be positioned to "RELAY ONLY."
3. Connect the Yellow, Red & Green wires from Modular Cable to the Screw Terminals located on the bottom of the Universal Module and plug into either of the two jacks on drapery motor. The Yellow lead should be connected to one screw terminal and the Red & Green together should be connected to the other screw terminal.

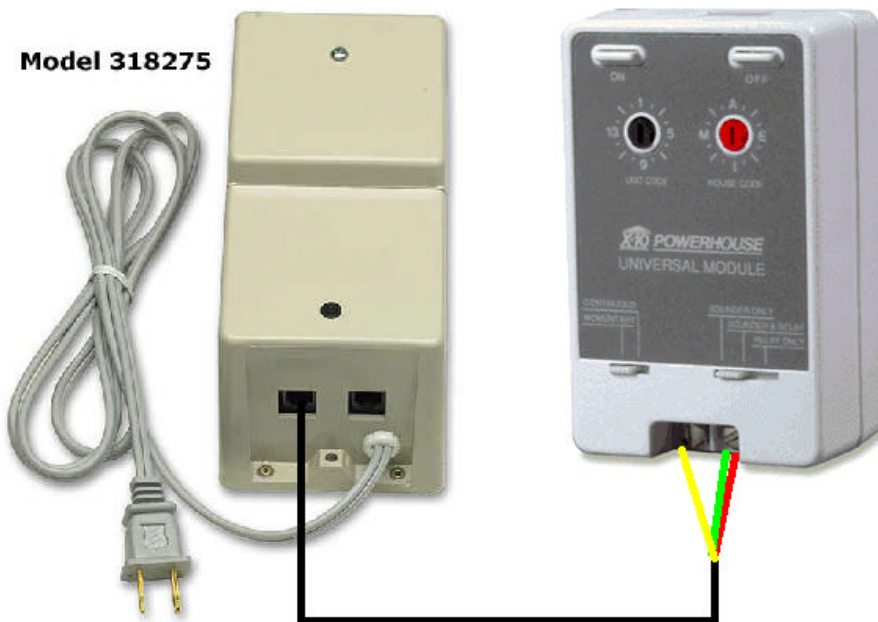

4. The HOUSE CODE dial position should match the House Code dial on the X-10 Receiver.
5. The UNIT CODE represents the unit # on the X-10 Transmitter.
6. Plug the Universal Module into a 115VAC 60HZ receptacle.
7. Test Universal Module by pressing "ON" located at the top of the module. Pressing the "On" button in sequence will activate Drapery motor in Open, Stop, and Closed functions.